
Portable Transponder Installation Tips

See the illustration for common mounting locations for your PIKEPASS transponder. *

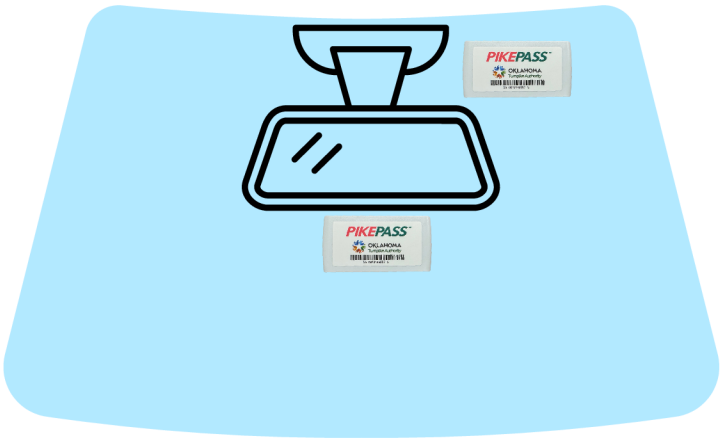


From inside your vehicle, clean the area of the windshield where the PIKEPASS will be placed.



Your portable transponder will come with two sets of adhesive Velcro strips for mounting your PIKEPASS to the inside of your windshield.

Remove the backing from one side of both sets of Velcro and adhere them vertically on the back of the transponder.

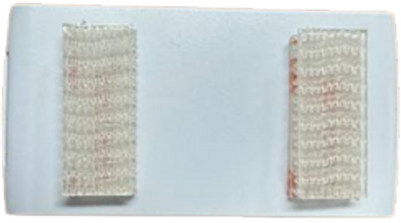



Remove the remaining backing from Velcro and gently press the transponder to the inside of the windshield with the adhesive side facing out. When properly mounted, **from inside the vehicle**, you will see your barcode and transponder number on the PIKEPASS facing you.

Remember to keep your vehicle information, including your license plate number, current on your PIKEPASS account.

*NOTE: Some vehicles may require alternate windshield placement. If unsure, please see your Owner's Manual or consult a manufacturer's dealership.